



MAJOR-LIFT INSTRUCTION MANUAL

READ ENTIRE MANUAL BEFORE OPERATING THE MAJOR-Lift. IF ANY QUESTIONS ARISE AS TO THE SAFETY OR OPERATIONS OF THE MAJOR-Lift ASK FIRST. CONTACT YOUR LOCAL MAJOR-Lift DEALER OR CALL US. THE MAJOR-Lift IS NOT A TOY, THE UTMOST CAUTION SHOULD BE USED AT ALL TIMES WITH THE MAJOR-Lift. NEVER ALLOW CHILDREN OR INTOXICATED INDIVIDUALS USE THE MAJOR-Lift. SERIOUS INJURY, PROPERTY DAMAGE, AND/OR DEATH CAN OCCUR IF MAJOR-Lift IS IMPROPERLY USED.

OPERATION OF THE MAJOR-Lift

PRE-LIFTING STAGE

NOTE: Your MAJOR-Lift in most indoor installations will be set for particular vehicles on the top and the bottom. You will have a list of the vehicles. If you do not, call your MAJOR-Lift representative immediately.

1. Drive top vehicle on elevating pan.
2. Drive until top vehicle's foremost tires (if pulling on forward, this will be the front tires, pulling on backwards, this will be the back tires) drop into the wheel well.
3. Turn off car engine, engage safety brake and place in park. If vehicle is manual shifting place vehicle in gear.
4. Check front of MAJOR-Lift to make sure that vehicle's forward tires are securely placed against back tire stop.
5. Walk around MAJOR-Lift to ensure nothing is placed on or near elevating pan.
6. Position yourself on opposite side of elevating platform next to key operated power pack.

LIFTING STAGE

1. Once all precautions of the Pre-Lifting Stage (above) are followed, check around MAJOR-Lift to ensure that no objects are in platform's way, and that no person (except the trained operator who will be operating the MAJOR-Lift) are within 10 feet. Next, press the activation lever to engage the power pack. As a safeguard the lever must be engaged at all times during raising and lowering of the MAJOR-Lift. This ensures your complete attention to the surroundings and operation of the MAJOR-Lift. If the lever's released, the MAJOR-Lift will automatically stop, hydraulically locked in that position. This locking mechanism is temporary in nature, over time the hydraulic locks will slowly allow the elevating pan to lower



unless the mechanical locks are engaged.

2. Keep lever pressed until elevating pan reaches top custom set position.

NOTE: During elevation, observe perimeter of MAJOR-Lift to ensure no interference.

3. Once top position is reached, turn push lever down to lower elevating pan onto mechanical locks. Keep lever pushed until the elevating pan is resting securely on mechanical locks. If the mechanical locks are not engaged, then elevating pan will lower to the floor.

4. Walk around, never under, the MAJOR-Lift to ensure that both mechanical locks are engaged. **IF ELEVATING PAN IS NOT RESTING SECURELY ON MECHANICAL LOCKS, BOTTOM VEHICLE, PERSONS OR OTHER OBJECTS CAN BE INJURED OR DAMAGED. KATOPARK Co. LLC. ASSUME NO RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY OCCURRING DUE TO THE TOP ELEVATING PLATFORM NOT RESTING ON THE MECHANICAL LOCKS. IF MECHANICAL LOCKS ARE DAMAGED OR NOT OPERATIONAL DO NOT USE MAJOR-Lift UNTIL A CERTIFIED INSTALLER HAS REPAIRED THIS PROBLEM.**

PLACEMENT OF LOWER VEHICLE

1. Once all the precautions of the Pre-Lifting and Lifting Stage are followed, drive lower vehicle under the elevating pan until forward tires reach the desired position.

2. Turn off engine of vehicle, set parking brake and place in park, or place in transmission in gear, if manual shifting.

REMOVAL OF LOWER VEHICLE

1. Back out lower vehicle and make sure lower vehicle is well clear of MAJOR-Lift before lowering elevating pan.

DESCENT STAGE

1. Walk around MAJOR-Lift to make sure nothing is below or near elevating pan's foot print for descent. Be certain that no person (except the trained operator who will be running the MAJOR-Lift) is within the 10 feet of moving MAJOR-Lift.
2. Pull down lock release lever at front of elevating pan.
3. Move back to activation lever and press activation lever up, which will elevate pan enough to release the mechanical locking mechanism. The mechanical locks will "pop-in" to show that the mechanical locks are now disengaged.
4. Push lever down to lower elevating pan.



NOTE: Never place any object or part of body on legs or any part of MAJOR-Lift. Serious injury or death can occur.

5. When lowering the MAJOR-Lift always be watchful for objects, persons, or animals that may go under the elevating pan. These objects, person or animals may be destroyed.
6. Once elevating pan descends to ground, lock release lever should automatically reset. If not, call your MAJOR-Lift representative to adjust this lock release.
7. Carefully, drive off the top vehicle.

Personal notes as to installation, operation or other notes.